



The JACK PUCK are multifunctional presses capable to transform extracts into a compact paste. Each model is characterized allowing it to be connected up to the user to improve its effectiveness.

Equipped with a frame of all heat-treated high-grade steel, the JACK PUCK are light and resistant presses easy to carry.

USER INSTRUCTIONS

1. Withdraw the rear handle, the model's base and the cover in the case to improve the effectiveness of the press (Maximum: 100°C/200°F).
2. Use the press to its table with the low C-stands supplied.
3. Put the extracts in the mold.
4. Put on the cover and light it up with the ring coil.
5. Tighten the release valve with the handle (counter-clockwise).
6. Compress the extracts with an equal force: movement of the handle.
7. Loosen the release valve using the handle (counter-clockwise).
8. Remove the cover by removing the ring coil first.
9. Put back on the ring coil without modifying the cover.
10. Tighten the release valve with the handle (clockwise).
11. Remove the compressed extracts from the mold using an up and down movement with the handle.
12. Loosen the release valve using the handle (counter-clockwise).
13. Wipe down the mold's base using your finger.

- The water can be used at the bottom of the mold and between the cover and the mold to facilitate the extraction of the extracts.

▲ NEVER use a larger handle than the one supplied with the press.

STORAGE

Always store your press vertically in a dry environment and with the cap and the handle in the fully retracted position.

MAINTENANCE


Lubricate with hydraulic grade oil the cap, handle and pump mechanism (see the drawing).



CHECKING THE OIL LEVEL

Keep it at the correct level at all times.

1. Turn release valve counter-clockwise in order to allow user to fully extend the ring mechanism to apply force in the handle for lowering the cap.
2. Insert the pin in vertical and horizontal position and remove the oil plug.
3. Check with the graduated indicator in turn. The oil should be level with the bottom of the plug. If not, add oil until the level is correct. Always fill with new hydraulic grade oil.
4. Replace the oil plug.
5. Tighten the oil plug.
6. Check pump operation.

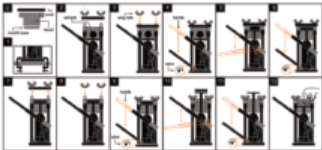

WARNING

- Do not use the pin for any other use than the press.
- Never use a larger handle than the one supplied with the press.
- Never use the release valve more than one full turn. The oil pressure release valve is sensitive.
- Never heat the mold, the model's base and the cover over 100°C/200°F.
- Use the press on heat, wooden and metal surfaces only.
- Keep it at the correct level at all times.

FOR INFORMATION OR TO ORDER

Visit www.inspira.it
 Contact: info@inspira.it Call (toll-free) +39-02-98-08-077

To be used in accordance with drawing, use and register.
 The manufacturer does not assume any responsibility for damage caused by use of the JACK PUCK, resulting from inappropriate use or assembly.