




## WARNING!

WHEN THE MACHINE IS RUNNING:

- Never place your fingers or the gloves or any other body part in contact with the grate or the blade.
- Safety glasses and gloves are required at all time. The gloves have to be tight enough so they don't get inside the grate slots.  
A loose glove is dangerous, beware!
- Never apply pressure on the grate.
- Do not use scissors, knives or any instrument above the grate.

THE TRIMPRO IS DESIGNED TO BE USED WITH FRESHLY HARVESTED PLANTS.


## USERS INSTRUCTIONS

- 1- Read carefully the security instructions (see Warnings  above) before using the machine.
- 2- Install the four legs and use the four bolts supplied to tighten the legs to the structure.
- 3- Install the bag on the ring under the machine using the velcros.
- 4- For trimming, hold the freshly harvested plant in your hand and move it over the grate with a back-and-forth movement, rotating it at the same time.

## MAINTENANCE

In order to facilitate the trimming, spray some vegetable oil and clean the grate and blade frequently with soap or isopropyl alcohol. It has to be done when the machine is not running. Sharpen the blade when necessary. To sharpen it, never remove the blade from the hub.

## EXTENSION LEGS - OPTIONAL-

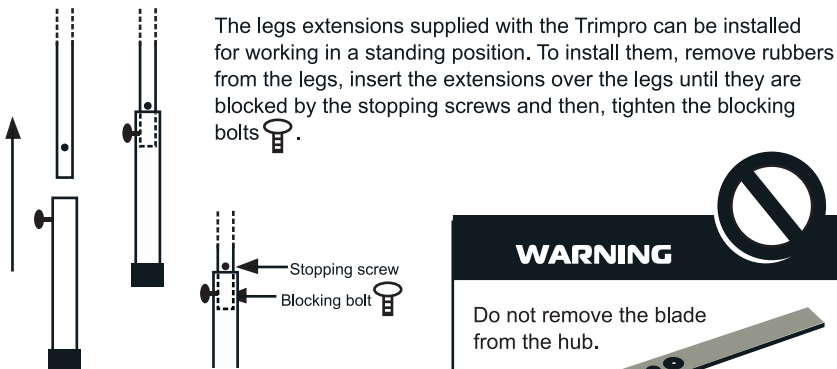

**WARNING**

For security, we recommend to keep a distance of at least 1/8 of an inch (3mm) between the grate and the blade.

**WARNING**

Do not remove the blade from the hub.

## FOR INFORMATION OR TO ORDER

VISIT: [WWW.TRIMPRO.COM](http://WWW.TRIMPRO.COM)  
 Contact: [info@trimpro.com](mailto:info@trimpro.com) Call (Canada): 1-450-349-0811  
 Toll free in North America: 1-844-TRIMPRO


To be used in accordance with all existing laws and regulations. The manufacturer does not accept any responsibility for damages caused to or by the TRIMPRO, resulting from an inadequate use or assembly.  
 PATENT: CAN: 2.470.370 USA: 7.168.643 AUS: 2004269786 PATENT PENDING: EUR: 04761713.9 CE STANDARD

## ADJUSTMENT OF THE BLADE HEIGHT


- To adjust the height of the blade, follow the steps:
- 1- Unscrew the "A" screw (blocking screw), then the "B" screw (tightening screw).
  - 2- Turn the "C" screw (adjustment of the height screw). To raise the blade, turn clockwise. To lower the blade, turn counterclockwise.
  - 3- Apply a pressure on the blade to be sure it is well located.
  - 4- Put back on the "B" screw.
  - 5- Verify if the height of the blade is OK by closing the grate. If not, return to step 1.
  - 6- To finish, put back on the "A" screw.

**NOTE:** The "A" and "B" screws should always be aligned with the flat side of the motor shaft.

## ADJUSTMENT SCREWS

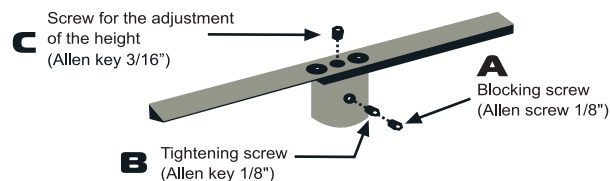


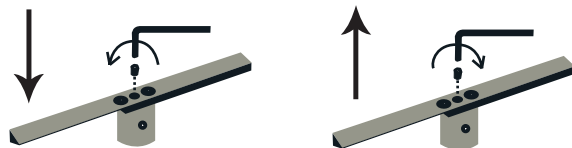

## LOWER & RAISE THE BLADE



## TO ADJUST FLAPS SUCCION

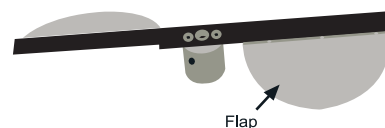To adjust the suction of the machine, change the flaps angle. For more suction, lower the flaps. For less, raise them.



SIDE VIEW	
	↓
+ suction	↓
	↑
- suction	↑

## SHARPENING

- 1- Remove the "A" and "B" set screws located in the hole on the side of the aluminum hub (see drawing "Adjustment screws").
- 2- Remove the blade and the hub in one piece from the motor shaft.
- 3- Clean the blade with isopropyl alcohol.
- 4- Use a grindstone.
- 5- Put a gentle pressure with the bottom of the blade on the grindstone with the sharpening angle desired.
- 6- Pass the blade on the grindstone with a movement from left to right and from right to left until the blade is properly sharpened.
- 7- Put back the blade and the aluminum hub on the motor shaft.
- 8- Put back in position the 2 set screws in the hole on the side of the aluminum hub. Make sure these set screws are aligned with the flat part of the motor shaft.